



# Installation Instruction of IND-31W & IND-31WH Series

## 1. Dimension of main generator

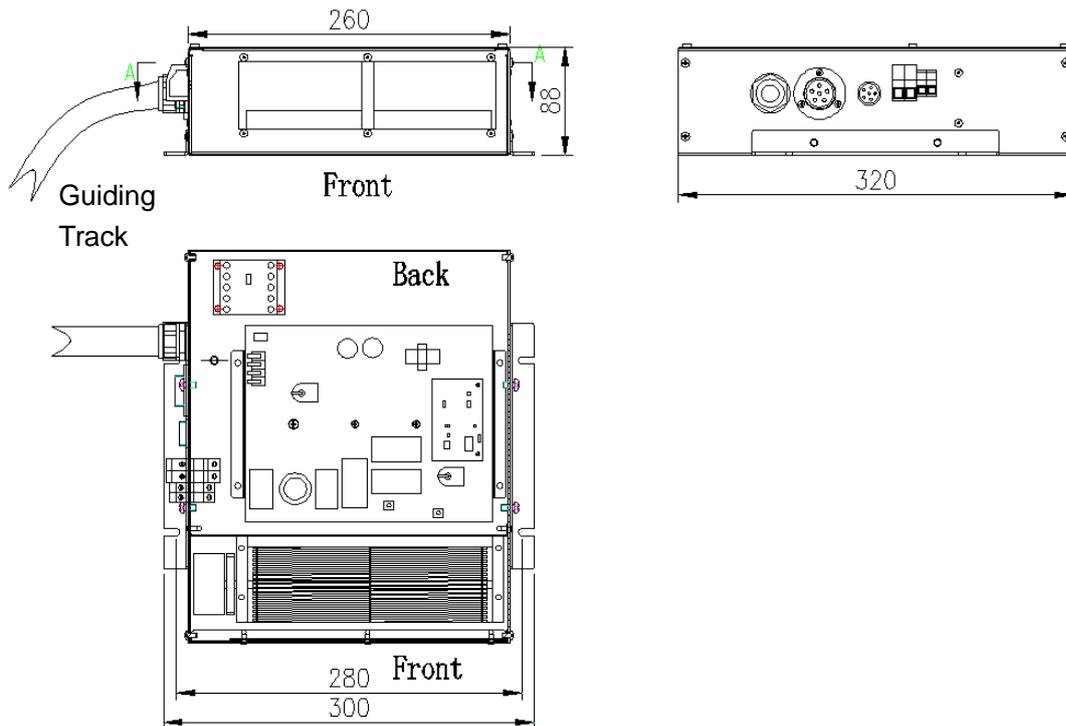


## 2. Installation and Ventilation of generator:

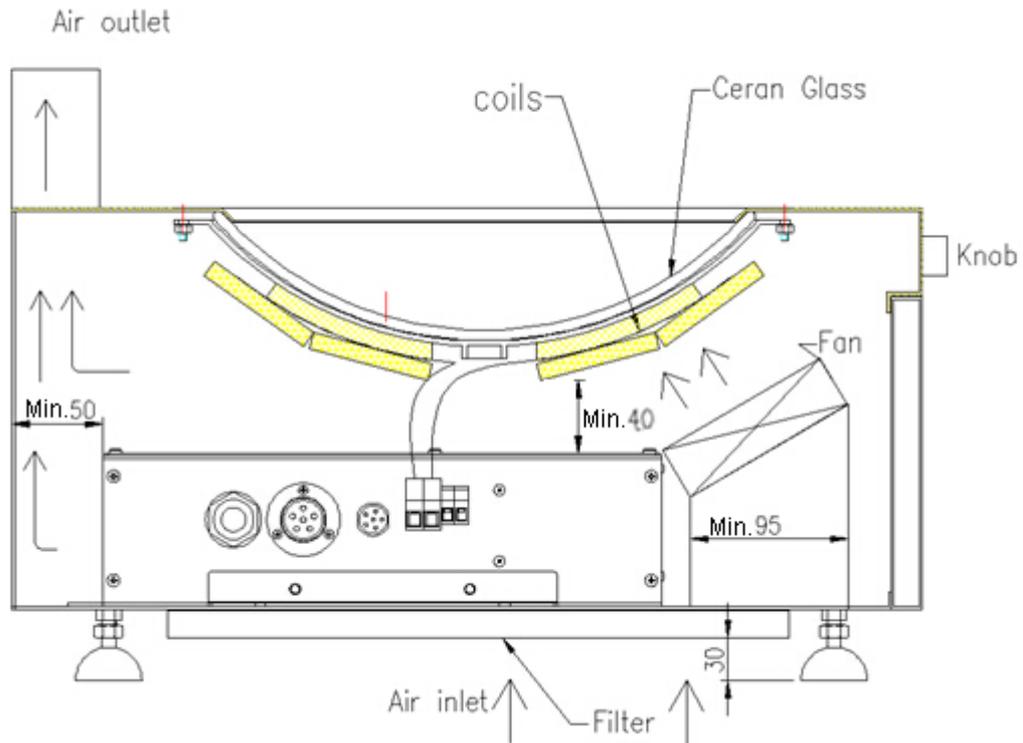


Remarks:

- The bottom plate should be used to avoid the mix of cold air and hot air;
- There should be a air tunnel to guide the fan to suck the cold air through bottom plate;
- If several generators are built in one cabinet, extra fan(s) should be considered to add at the back panel;


➤ : The installation hole of the Switch and Indicator Lamp:

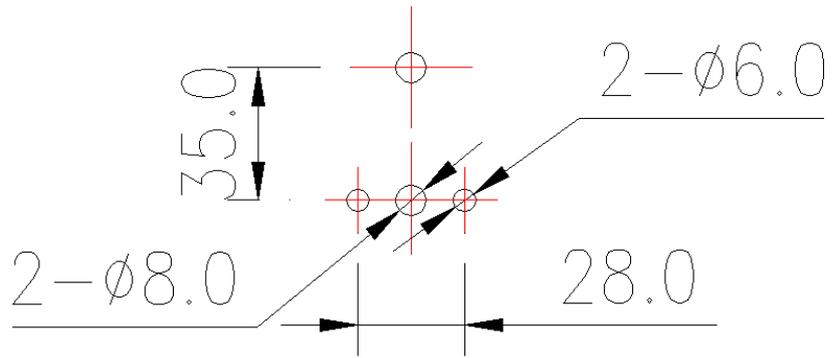

➤ Wiring Diagram:

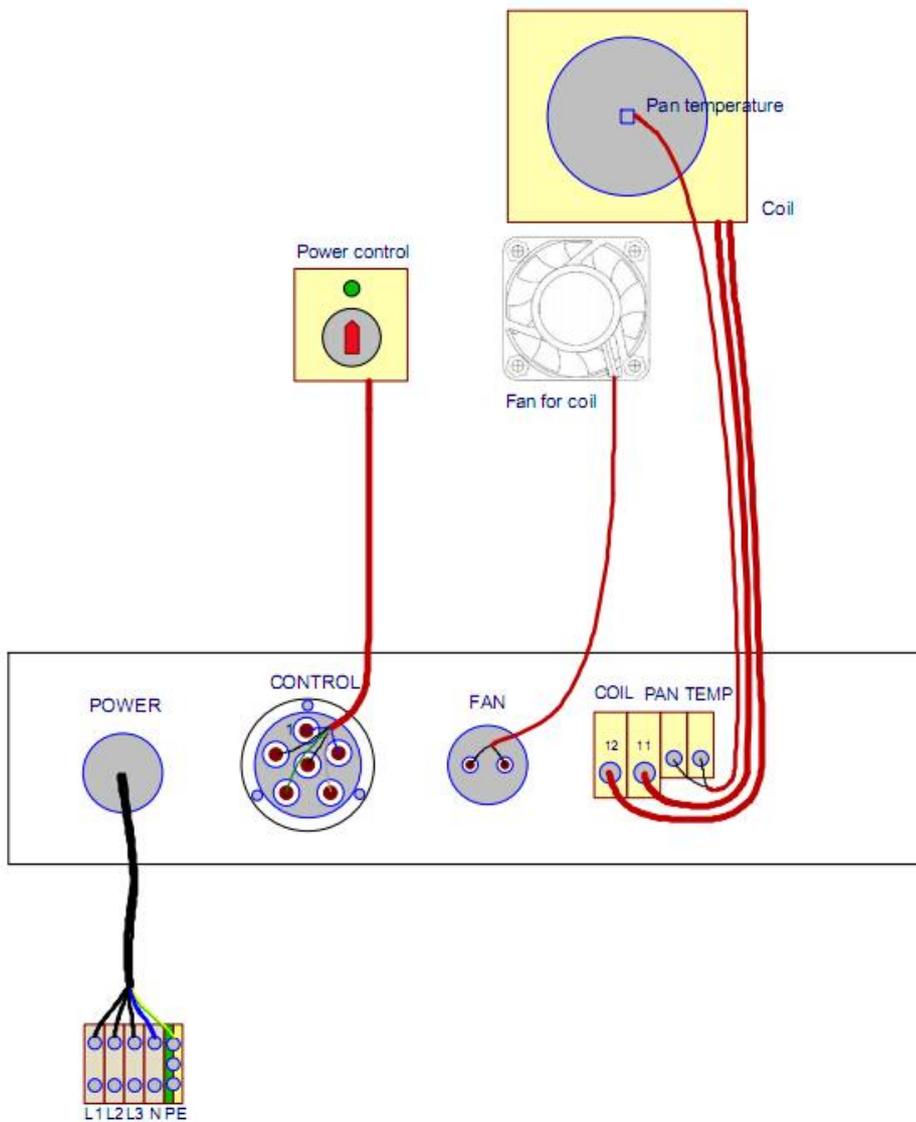

IND-31W-5000S

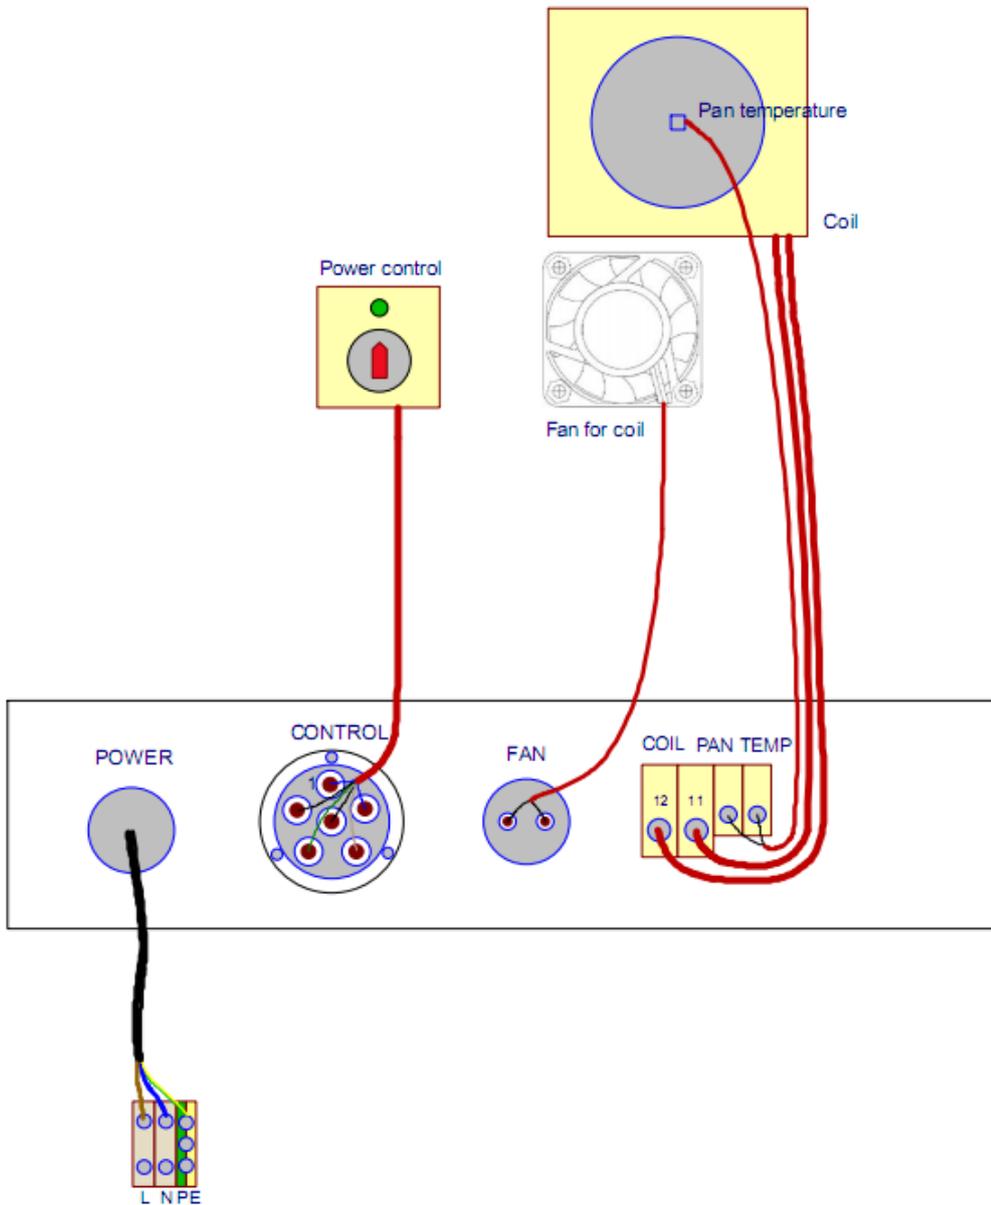

IND-31W-3500S

This Document Contains Confidential information, the Dissemination, Publication, Copying or Duplication of this Document or any hardware, software, or ideas described herein without Prior Written Authorization is Strictly Prohibited.

© 2023 Middleby Food Service Equipment (Qingdao) Co., Ltd.