

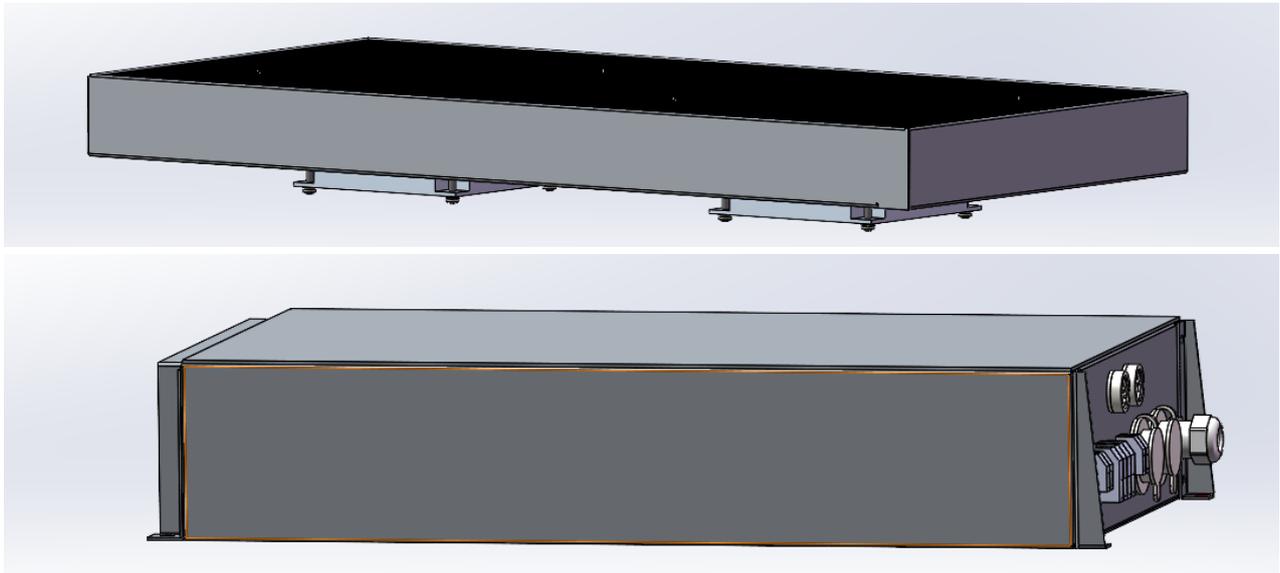



Installation Instruction of IND-30P-3500x2E

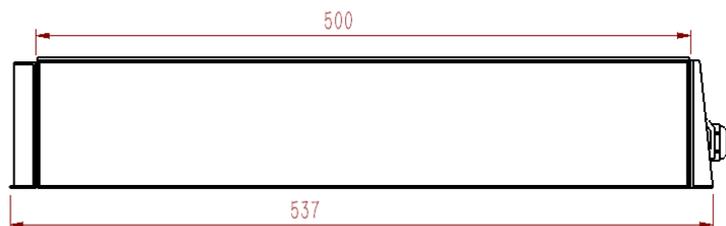

Dimension of the Generator

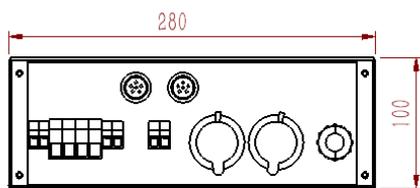


Dimension of the Coil assembly:

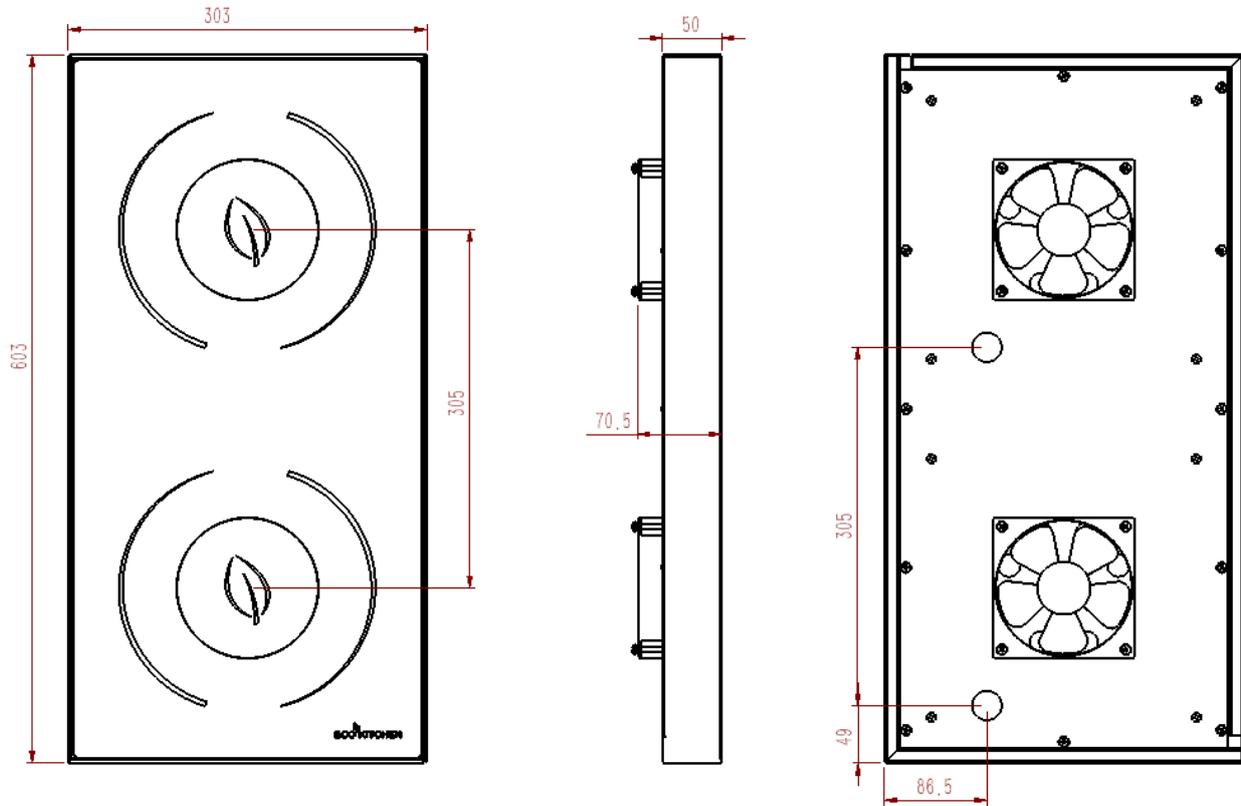


Installation of the Generator:

- The minimum distance from generator back to back panel is 20 mm;
- The gap between the generator bottom and bottom plate should be bigger than 40mm;
- The back panel should have holes for ventilation, the minimum area of total holes should be larger than 100 cm² ;

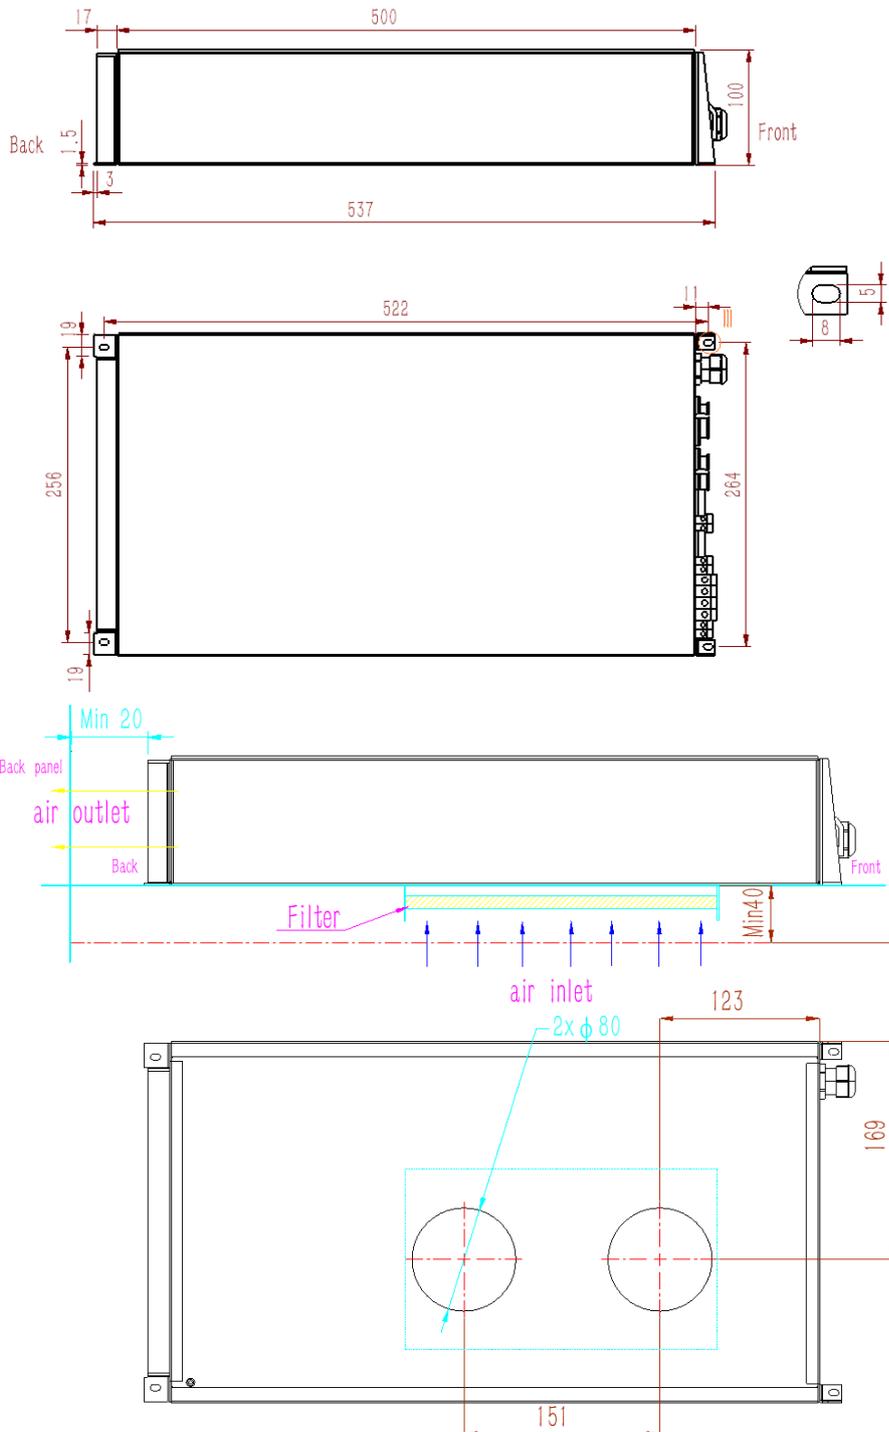



Installation of the Coil Assembly:

- The gap between the fan bottom and lower plate should be bigger than 40mm;
- The back should have holes for ventilation, the minimum area of total holes should be larger than 80 cm² ;
- The minimum distance from coil back to the back panel is 60 mm;

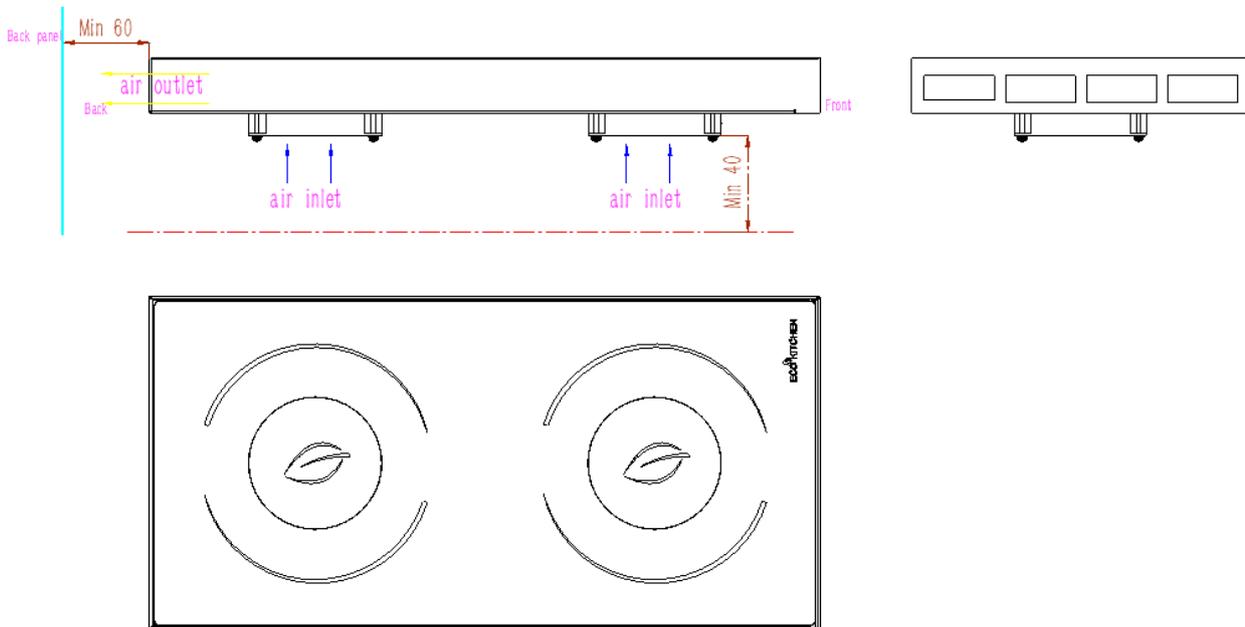


Installation of the Filter:

 The bottom of the generator installation plate should have a filter supporter, the dimension should be:

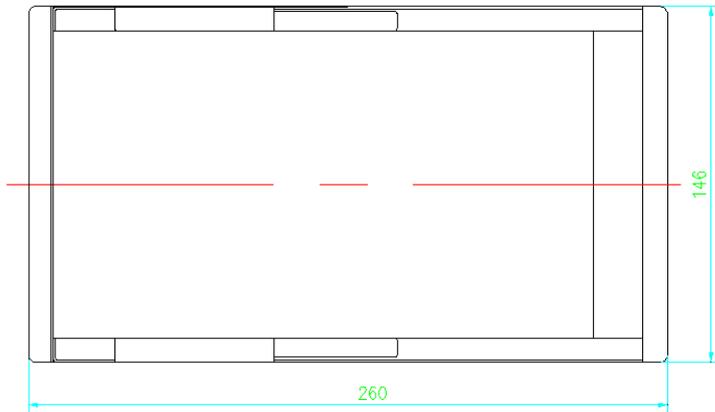


The Dimension of the Filter:

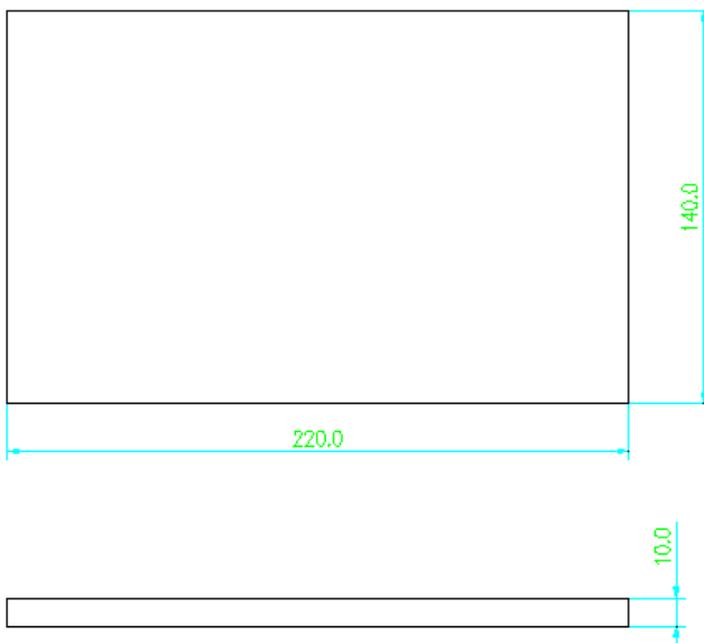


Installation of the Switch Assembly:

The installation hole of the Switch and Indicator Lamp

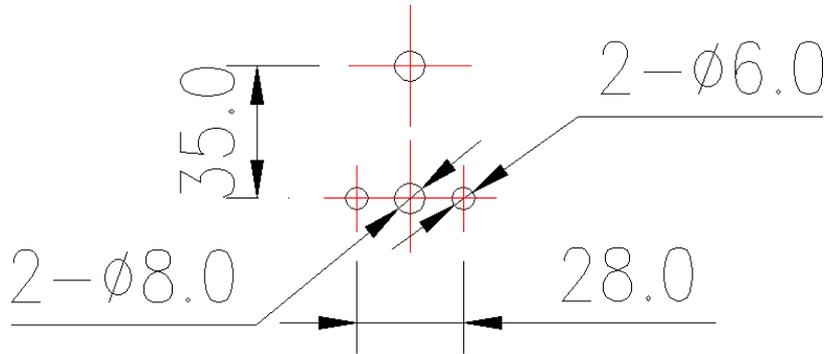

Wiring Diagram:

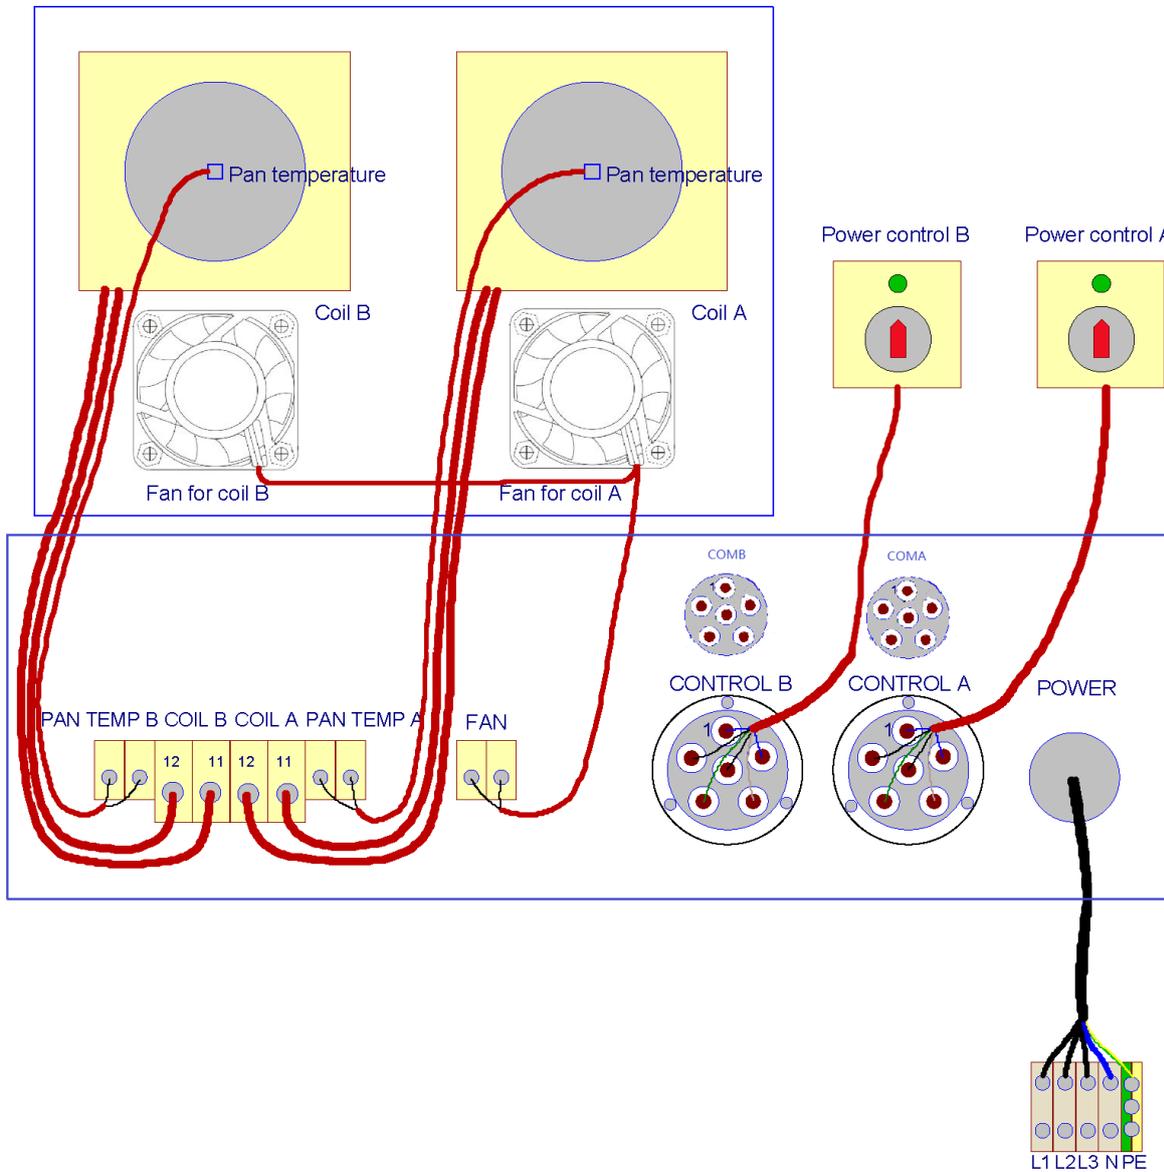

This Document Contains Confidential information, the Dissemination, Publication, Copying or Duplication of this Document or any hardware, software, or ideas described herein without Prior Written Authorization is Strictly Prohibited.

© 2023 Middleby Food Service Equipment (Qingdao) Co., Ltd.